



# Panasonic LUMIX DMC-LX100 Battery Replacement

This guide will help you replace a dead or faulty battery to return power to your Panasonic LUMIX DMC-LX100 camera.

Written By: Olivia Hillman



## INTRODUCTION

Are you pressing the power button but your camera stays turned off? Replacing the battery is a quick fix that should solve this problem.

## Step 1 — Battery



- Looking at the bottom of the camera, slide the OPEN/LOCK switch to the left into the OPEN position.

 The battery housing door should swing open.

## Step 2



- Flip the inside switch up to release the battery.

## Step 3



- Grip the edge of the battery and pull it out.
- ⓘ Use a LUMIX Panasonic DMW-BLE9PP Battery Pack for replacement.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 01:26:51 PM.